



*12/12/87*

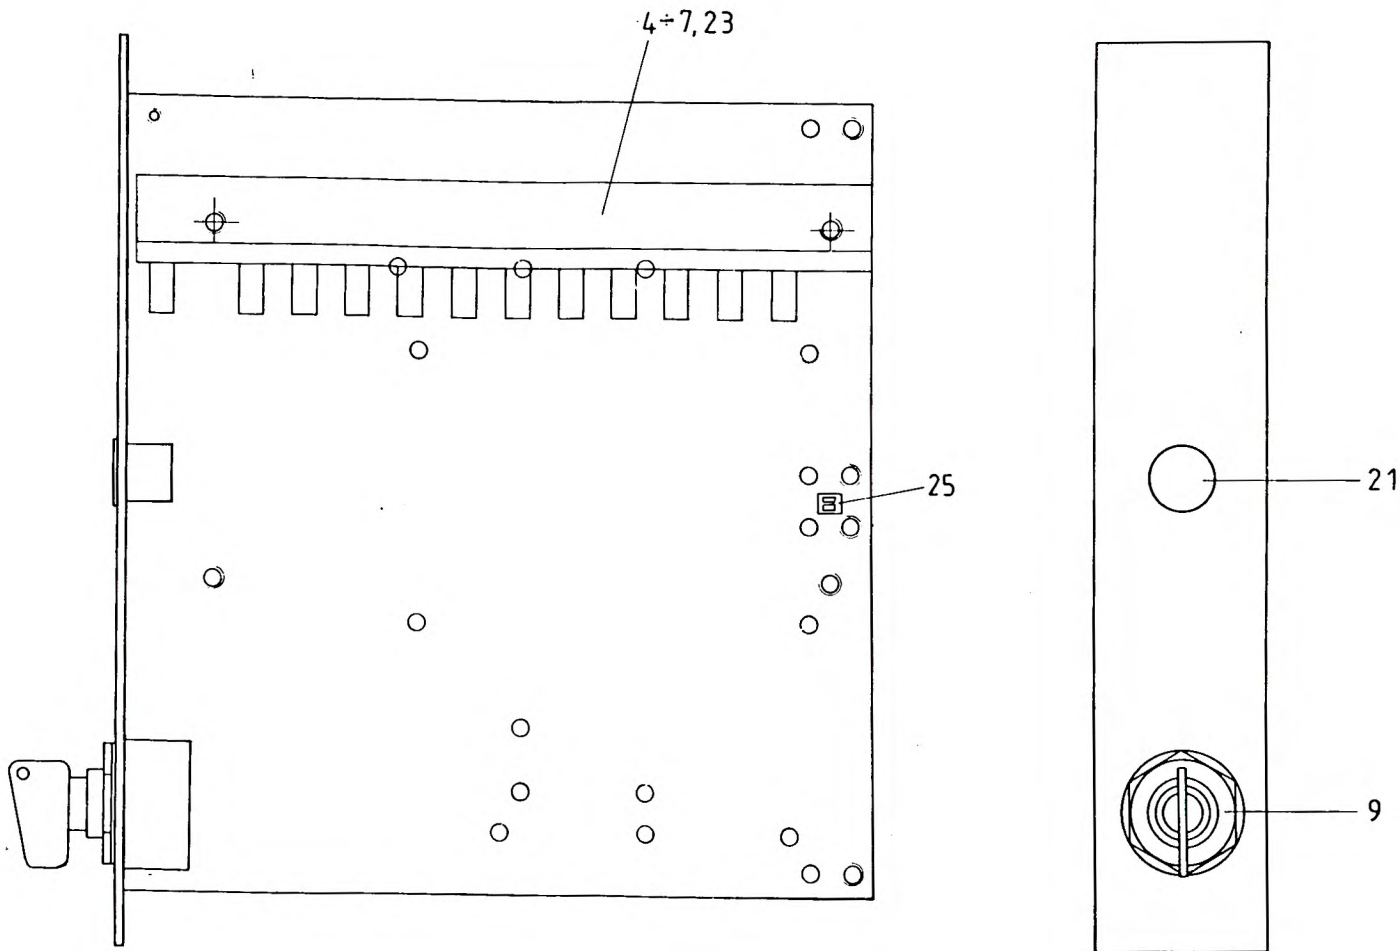


 <b>KRUPP</b>	Benennung	Description	Bildtafel Nr. Plane of projection No.	A-Zu mod. state	FHG
	Einschub 10A Oberwagen	Slide-in unit 10A turntable	1 555 587	B	807
Ersatzteilliste (Bildtafel) List of spare parts (Plane of project.)			ETL-Nr. 1 676 369	Blatt Sheet	1

F-ZA 21/0928858-08.85

ME = Mengeneinheit / QCD = Quantity Code  
 01 - Stück 06 - m<sup>3</sup> 17 - cm<sup>2</sup> 24 - Zoll  
 02 - kg 07 - l 18 - dm<sup>2</sup> 25 - mg  
 03 - t 08 - cm 20 - cm<sup>3</sup> 26 - 1/1000 Stück  
 04 - m 09 - g 22 - Satz  
 05 - m<sup>2</sup> 10 - mm 23 - Paar

Ä-Zust. mod.state	Pos. Item	Stücklisten-Nr. Liste of spare parts No.		Menge Quantity	ME QCD	Benennung	Description	Bemerkung Remark
		Teile-Nr. Part-No.	ETL					
	004	1576384		1.0	01	DOSE, SICHERUNGS-	FUSE BOX	
	005	0550540		8.0	01	SICHERUNG, PKW-LKW-	PASSENGER CAR AND TRUCK SAFETY F USE	
	006	0550539		2.0	01	SICHERUNG, PKW-LKW-	PASSENGER CAR AND TRUCK SAFETY F USE	
	007	0557249		2.0	01	SICHERUNG, PKW-LKW-	PASSENGER CAR AND TRUCK SAFETY F USE	
	009	0557971		1.0	01	SCHALTER, MOTOR-	MOTOR CONTROLLER	
	011	1576401		2.0	01	HUELSE, STECK- _9,5X6 DIN 46 245 -MS-PVC	RECEPTACLE	
	021	0553026		1.0	01	KAPPE, ABDECK-	PROTECTIVE COVER	
	023	1680595		1.0	01	ABDECKUNG, SICHERG.	COVERING FOR FUSE BOX	
	025	1203988		1.0	01	BEFESTIGUNGSELEM.	FASTENING ELEMENT	
*** ENDE DER LISTE ***						*** END OF THE LIST ***		

 <b>KRUPP</b> <b>Ersatzteilliste</b> List of spare parts (Plane of project)	Benennung		Description		Ersatzteilliste Nr. List of spare parts No.		Ä-Zu. mod. state	FHG
	EINSCHUB 10A OBERWAGEN		SLIDE-IN UNIT 10A, TURNTABLE		1676369-ETL		C	807
						Datum <b>13.03.86</b>		Seite Page
								<b>1</b>

1 551 097 - 11.84