 
	Benennung	Description	Bildtafel Nr. Plane of projection No.	A-Zu mod. state	FHG
	Ersatzteilliste (Bildtafel) List of spare parts (Plane of project.)	Pumpe, Ölbehälter, Zubehör	Pump, Oiltank, Accessories	1 556 395	
			ETL-Nr. 1 744 612	Blatt Sheet	1

ME = Mengeneinheit / QCD = Quantity Code

01 - Stück 06 - m<sup>3</sup> 17 - cm<sup>2</sup> 24 - Zoll  
 02 - kg 07 - l 18 - dm<sup>2</sup> 25 - mg  
 03 - t 08 - cm 20 - cm<sup>3</sup> 26 - 1/1000 Stück  
 04 - m 09 - g 22 - Satz  
 05 - m<sup>2</sup> 10 - mm 23 - Paar

Ä-Zust. mod.state	Pos. Item	Stücklisten-Nr. Liste of spare parts No.		Menge Quantity	ME QCD	Benennung	Description	Bemerkung Remark
		Teile-Nr. Part-No.	ETL					
A	001	1744604	ETL	1.0	01	PUMPEN- U. OELBEH. - EINBAU	PUMPS-MOUNTING AND OIL-TANK-MOUNTING	
	003	0552035		1.0	01	VENTIL, RUECKSCHLAG	BACK-PRESSURE VALVE	
	004	1684367		1.0	01	VENTIL, 3-WEGE- STROMREGEL-	3-WAY VALVE	
	005	0557501		1.0	01	VENTIL, ENTLUEFTGS-	{AIR-}VENT VALVE	
	032	1682885		1.0	01	LEITUNG, SCHLAUCH- 2SN_20NN4700P DIN 20066	HOSE ASSEMBLY	
	033	1684397		1.0	01	LEITUNG, SCHLAUCH- 2SN_12PP5200P DIN 20066	HOSE ASSEMBLY	
	034	1682886		1.0	01	LEITUNG, SCHLAUCH- 2SN_16NN420P DIN 20066	HOSE ASSEMBLY	
	035	1684001		1.0	01	LEITUNG, SCHLAUCH- 2SN_25NN1200P DIN 20066	HOSE ASSEMBLY	
	036	1573137		1.0	01	LEITUNG, SCHLAUCH- 4SP_16PP1200P DIN 20066	HOSE ASSEMBLY	
	049	1201396		2.0	01	STUTZEN, MESZ-	CONNECTING ADAPTER	
*** ENDE DER LISTE ***						*** END OF THE LIST ***		

 <b>KRUPP</b> Ersatzteilliste List of spare parts (Plane of project)	Benennung	Description	Ersatzteilliste Nr. List of spare parts No.	Ä-Zu. mod. state	FHG
	PUMPE, OELBEH., ZUB.	PUMP, OIL-TANK, ACCESSORIES	1744612-ETL	A	781
			Datum <b>13.03.86</b> Date	Seite <b>1</b> Page	