

GROVE	BESCHILDERUNG ENGLISCH KRANKABINE	BILDTAFEL PICTORIAL DISPLAY		GMK3060
	SIGNS AND SYMBOLS ENGLISH CRANE CABIN	02.17	3267624-ETL B	

⚠ DANGER

AN UNTRAINED OPERATOR SUBJECTS HIMSELF AND OTHERS TO DEATH OR SERIOUS INJURY: YOU MUST NOT OPERATE THIS MACHINE UNLESS:

- YOU HAVE BEEN TRAINED IN THE SAFE OPERATION OF THIS MACHINE:
- YOU READ, UNDERSTAND AND FOLLOW THE SAFETY AND OPERATING RECOMMENDATIONS CONTAINED IN THE MANUFACTURER'S MANUALS, YOUR EMPLOYER'S WORK RULES AND APPLICABLE GOVERNMENT REGULATIONS.
- YOU ARE SURE THE MACHINE IS OPERATING PROPERLY AND HAS BEEN INSPECTED AND MAINTAINED IN ACCORDANCE WITH THE MANUFACTURER'S MANUAL.
- YOU ARE SURE THAT ALL SAFETY SIGNS, GUARDS AND OTHER SAFETY FEATURES ARE IN PLACE AND IN PROPER CONDITION. AVOID ELECTROCUTION, TIPPING, TWO - BLOCKING AND OTHER OPERATIONAL HAZARDS.

TIPPING

- TO AVOID DEATH OR SERIOUS INJURY, OUTRIGGERS MUST BE PROPERLY EXTENDED BEFORE MOVING THE BOOM FROM THE STOWED POSITION.
- FREE-STANDING OPERATIONS WITH MORE THAN 8:8 COUNTERWEIGHT SHOULD BE PERFORMED ONLY WITH THE TRUCK CRANE POINTING TO THE BACK. THE CRANE WILL OVERTURN IN ANY OTHER WORKING POSITION.
- ENSURE ALL PINS AND FLOATS ARE PROPERLY INSTALLED AND THE OUTRIGGER BEAMS ARE PROPERLY EXTENDED.
- FOLLOW INSTRUCTIONS IN OPERATOR'S AND SAFETY HANDBOOK.

CRUSHING HAZARD

DEATH OR SERIOUS INJURY COULD RESULT, FROM BEING CRUSHED BY MOVING MACHINERY BEFORE ACTUATING SWING OR ANY OTHER FUNCTION, SOUND HORN AND VERIFY THAT ALL PERSONNEL ARE CLEAR OF ROTATING AND MOVING PARTS.

ELECTROCUTION HAZARD

TO AVOID DEATH OR SERIOUS INJURY, KEEP ALL PARTS OF THIS MACHINE, THE LEAST 20 FEET AWAY FROM ELECTRICAL POWER LINES AND EQUIPMENT.

⚠ ATTENTION

ELECTRONIC EQUIPMENT ON THIS CRANE IS INTENDED AS AN AID TO THE OPERATOR.

UNDER NO CONDITION SHOULD IT BE RELIED UPON TO REPLACE THE USE OF CAPACITY CHARTS AND OPERATING INSTRUCTIONS. SOLE RELIANCE UPON THESE ELECTRONIC AIDS IN PLACE OF GOOD OPERATING PRACTICES CAN CAUSE AN ACCIDENT DO NOT REMOVE ANY DECAL, THE LOAD CHART, OR THE OPERATOR'S AND SAFETY HANDBOOK FROM THIS CRANE

THE CRANE OPERATOR HAS TO INFORM HIMSELF CONSTANTLY ABOUT THE LOADS AND THE EXISTING RADI, INDEPENDENT OF THE INDICATED VALUES.


ATTENTION UPON UNINTENDED MOVEMENTS OF THE CRANE PUT RESPECTIVE LEVER TO ZERO.

REPEATED USE OF EMERGENCY ACTUATION SEQUENCE COULD CAUSE CRANE DAMAGE.

IF DESIRED FUNCTION DOES NOT OCCUR UPON SECOND ACTIVATION OF KEY SEQUENCE WHILE IN EMERGENCY MODE, STOP AND REQUEST ASSISTANCE FROM THE LOCAL DISTRIBUTOR OR CRANE CARE

12

TWIN-LOCK™
01982160-A

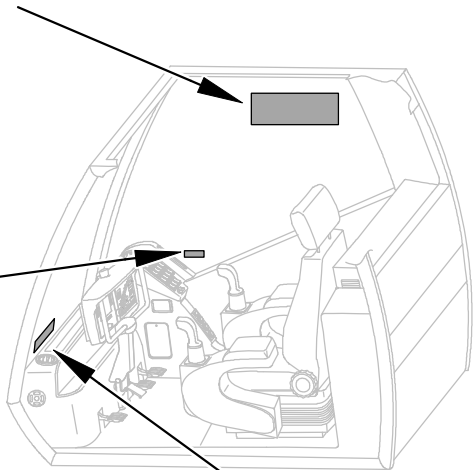

8

**When leaving the crane cab,
set the parking brake**

Standard Hand Signals For Controlling Crane Operations

 HOIST	 LOWER	 USE MAIN HOIST	 TRAVEL (One track)	 TRAVEL (Both tracks)
 USE WHIP LINE	 RAISE BOOM	 LOWER BOOM	 SWING	 STOP
 MOVE SLOWLY	 RAISE THE BOOM AND LOWER THE LOAD	 LOWER THE BOOM AND RAISE THE LOAD	 EXTEND BOOM (Telescoping booms)	 RETRACT BOOM (Telescoping booms)
 TRAVEL	 DOG EVERYTHING	 EMERGENCY STOP	 EXTEND BOOM (Telescoping booms)	 RETRACT BOOM (Telescoping booms)

01982160-A