

WARNING

CARRYING PERSONNEL can result in death or serious injury.

Only Lift or Lower personnel when using an approved work platform.

Never move machine with personnel on work platform.

①

WARNING

STAY CLEAR during outrigger extension & retraction.

②

DANGER

MACHINE TIPOVER can result in death or serious injury.

- Consult capacity chart for load limits.
- Level machine before raising load.
- No side loading.
- Before traveling rotate boom to forward position.
- With boom attachments such as jibs or work platform booms must be fully retracted and forward unless on outriggers.

③

WARNING

MACHINE ROLL AWAY can cause death or serious injury.

ALWAYS engage parking brake before dismounting.

④

OPERATING INSTRUCTIONS

- Read operator's manual before operating.
- Fasten seat belt.
- Shifter must be in neutral to start.
- Release parking brake for transmission to function.

⑤

WARNING

HOT COOLANT can scald.

Check and service cooling system only when cool.

⑥

WARNING

PINCH POINT
Pain and amputation can occur.
Keep Away

⑦

WARNING

MOVING PARTS can cut off fingers or hands.
Keep hands clear of fans and belts while engine is running.

⑧

WARNING

SAVE LIVES AND PREVENT INJURIES.

- Watch your path.
- Help people notice you.
- Use your horn.
- Be sure backup alarm is operating.

⑩

DANGER

CRANE FAILURE can kill. Load may drop abruptly.

NEVER use wire rope, sheaves, drums or fittings that are worn-out, damaged or abused. OBSERVE rope for proper reeving.

KNOW WEIGHT of load & ensure it is within crane capacity before lifting.

DO NOT OVERLOAD

KEEP PEOPLE CLEAR

⑨

WARNING

EXPLOSIVE GASES can cause serious injury.

Keep sparks, flames, and lighted materials away from Batteries.

When jump starting:

- Wear safety glasses.
- Be certain that machines do not touch and batteries are not frozen.
- Follow jump starting directions contained in Operator's Manual.

⑪

CAUTION

Do not operate crane with door in open position. Window panel may be swung open during operation for ventilation.

⑫

DANGER

ELECTROCUTION can result in death or serious injury.

Electrocution can occur without direct contact.

STAY CLEAR of power lines with boom, crane and load. Check operator's manual for clearance zone.

⑬

DANGER

ELECTROCUTION can result in death or serious injury.

Electrocution can occur without direct contact.

STAY CLEAR of power lines with boom, crane and load. Check operator's manual for clearance zone.

WARNING

FIRE HAZARD

Single fuel is flammable and can cause a fire or explosion. Death or personal injury could occur.

- Keep open flames away.
- Do not use smoking materials during the day of working.

⑭

WARNING

DO NOT GET NEAR HYDRAULIC OIL LEAKS

Hydraulic oil is flammable and can cause a fire or explosion. Death or personal injury could occur.

Hydraulic oil is also a skin irritant and can cause dermatitis.

Do not use smoking materials during the day of working.

⑰

DANGER

HIGH SPEED TRAVEL can result in loss of control.

Go slow on rough or slippery roads.

Drive only as fast as conditions allow.

DANGER

MACHINE TIPOVER can result in death or serious injury.

- Make certain boom oscillation lock-out is engaged with the boom.
- Only disengage boom oscillation lock-out prior to traveling. Stop through tip alarm.

⑮

DANGER

Crane starts to tip if the machine is not fully in the forward, parked and down position. The boom will fall and the power will result in MAJOR DAMAGE.

Make certain boom oscillation lock-out is engaged with the boom.

Only disengage boom oscillation lock-out prior to traveling. Stop through tip alarm.

⑯